

AALTO WALL ROUTER - QUICK GUIDE

NOTE

*This is a quick guide for installing the Aalto Wall Router.
Make sure you also have the Aalto Control 4.0 User Manual at hand.*

Aalto Wall Router is a small wireless network extender which can be used for extending the range of an Aalto Control network.



1. To Install the Wall Router

1. Install the Wall Router before adding the luminaires to the Aalto Control 4.0 software.
2. Make sure that the Wall Router is in the same PAN ID network with the Aalto Control luminaires and Coordinator.
3. Plug the Wall Router into a standard wall power socket in a safe location. Write down the RF-ID of the Wall Router.
4. When adding the luminaires in the Aalto Control 4.0 software, do not add the Wall Router to the software. If the router is found in an automatic luminaire search (see page 9 in the *Aalto Control 4.0 User Guide*), identify it by using the RF ID, and delete it from the software.

2. Wall Router Functions

Associate / Power LED

- On, *solid green* = Not associated with network
- On, *blinking green* = Successfully joined network

Reset / Ident button

- Deletes all settings. **DO NOT PRESS THIS!**



Associate / Power LED



Reset / Ident button
DO NOT PRESS!