

## Installation Guide for “Control Modules” Spare Parts W030006 and W030008

**W030006** (for TKT65xx CBU, with the original  
Control Module XST2501)

**W030008** (for TKT65xx, TKT66xx, TKT68xx TKT68xx CBU,  
with the original Control Module XST2502)



**WARNING**

This is a quick guide for installing a spare part. The Installation and maintenance guide originally delivered with the product contains important information, and must be read before installing the spare part.



**WARNING**

The central battery unit and the battery housing can be opened only by a qualified electrician.

There is a dangerous voltage level in the output circuits, and inside the central battery unit. Chancing the main switch to 0 position will NOT make the central battery unit de-energized. Device must be made de-energized before any maintenance or repair work!

### DE-ENERGIZING THE CENTRAL BATTERY UNIT

1. Switch the battery fuse *OFF*.
2. Switch the main switch to 0, and disconnect the CBU from mains. The device is now de-energized.

### REPLACING THE CONTROL MODULE W03006 (XST2501) / W030008 (XST2502)

1. After de-energizing the CBU, open the screws holding the front panel in place, and move the front panel out of the way. Do not detach any wires.
2. Locate the control module behind the front panel.
3. Disconnect wires and connectors from the control unit.
4. Replace the unit with the spare part unit, and re-attach connectors and wires exactly as they were in the original part.
5. Re-energize the unit by following the de-energize steps in reverse order.

## Varaosan W030006 ja W030008 ”Valvontamoduuli” asennusohje

**W030006** (TKT65xx-keskuksille, joissa on alkuperäinen  
Valvontamoduuli XST2501)

**W030008** (TKT65xx-, TKT66xx-, TKT67xx- ja TKT68xx-keskuksille,  
joissa on alkuperäinen Valvontamoduuli XST2502)



**VAROITUS**

Tämä on pikaohje varaosan asentamiseen. Alkuperäisen tuotteen mukana on toimitettu tärkeää tietoa sisältävä tuotteen oma Käyttö- ja huolto-ohje, joka tulee lukea ennen varaosan asentamista!



**VAROITUS**

Turvavalokeskuksen saa avata vain sähköalan ammattitaitoinen henkilö.

Lähtöryhmissä ja keskuksen sisällä on vaarallinen jännitetaso. Pääkytkimen kääntäminen 0-asentoon EI tee keskusta jännitteettömäksi. Ennen huoltoa, korjausta tai varaosan vaihtamista tulee keskus tehdä jännitteettömäksi!


### KESKUKSEN JÄNNITTEETTÖMÄKSI TEKEMINEN

1. Kytke akkusulake pois päältä, *OFF*-asentoon.
2. Käännä keskuksen pääkytkin asentoon 0, ja irrota keskus verkkosyötöstä. Keskus on nyt jännitteetön.

### VALVONTAMODUULIN W030006 (XST2501) / W030008 (XST2502) VAIHTAMINEN

1. Kun keskus on jännitteetön, avaa etupaneelia paikoillaan pitävät ruuvit, ja siirrä etupaneeli pois tieltä. Älä kuitenkaan irrota etupaneelin johtoja.
2. Paikanna viallinen valvontamoduuli etupaneelin takaa.
3. Irrota valvontamoduulista kaikki liittimet.
4. Korvaa viallinen valvontamoduuli varaosavalvontamoduulilla, ja kiinnitä liittimet kuten ne olivat alkuperäisessä osassa.
5. Kytke jännite takaisin keskukseen päinvastaisessa järjestyksessä kuin kohdassa ”Keskus jännitteettömäksi tekeminen”.

**W030006**  
(XST2501)

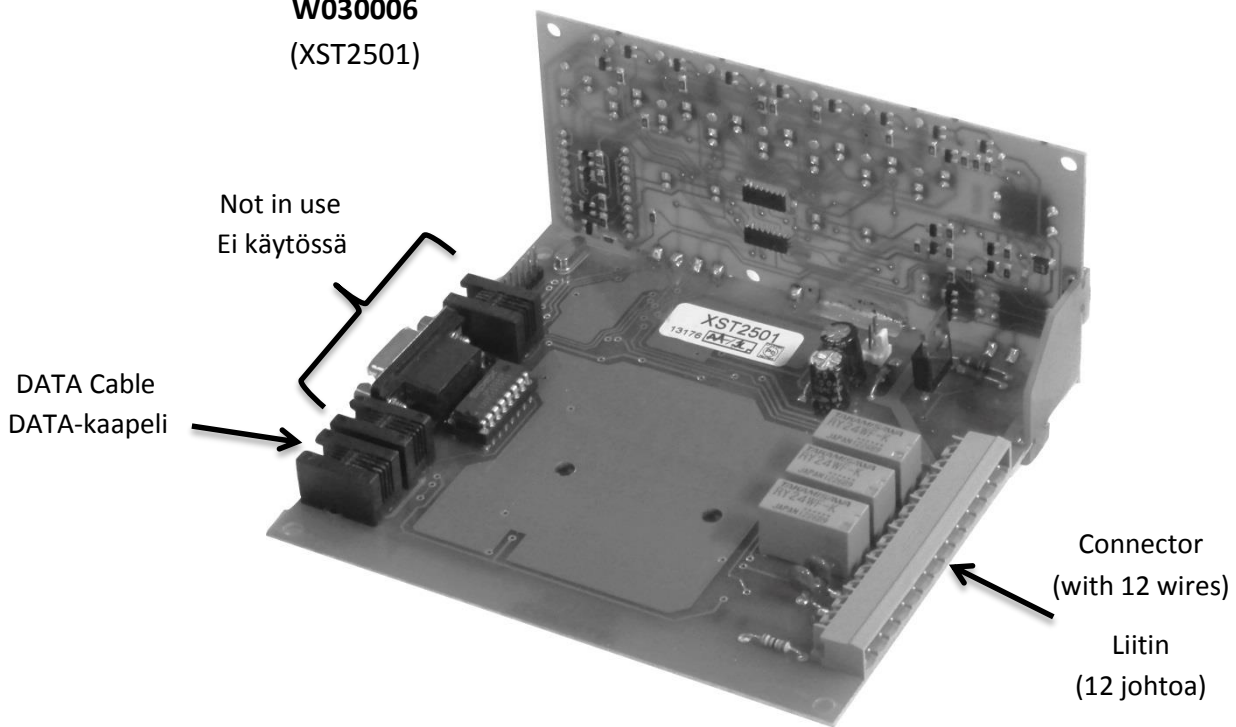

**W030008**  
(XST2502)

